

I cannot install the Video Server or Network Camera.

1. Reason: The power is not plugged. Solution : Please check the power is plugged correctly. 2. Reason: The network does not work. Solution : Open a DOS prompt and type "PING 127.0.0.1" to see if any response is back. If not, his or her network has problem. 3. Reason: The IP is invalid. Solution : Open a DOS prompt and type "PING Assigned IP Address " to see if any response is back. If yes, please